

Kit Assembly

Step by Step

Step 1.

 
Remove the frame out of the carry bag. Stand the frame on its feet. Clear the area for expanding the frame.

Reference Connection Method(s) 1, 2 and 3 for more details.



Step 2.


Carefully expand the frame to approximately 1/3 open. Use caution when handling and interacting with this product, it may contain sharp and pinching components.

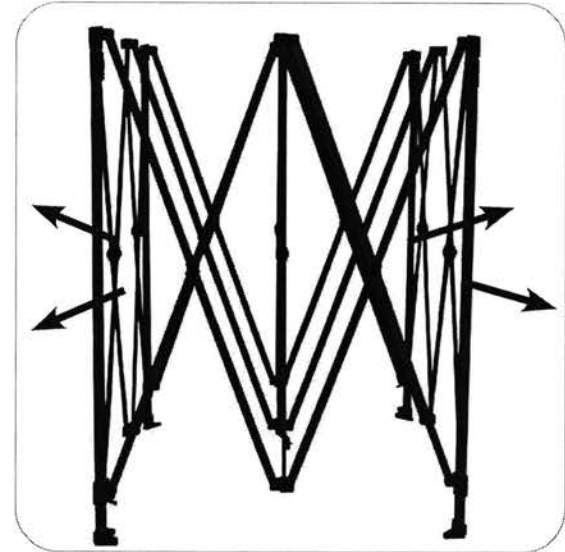

Step 3.



With the frame at approximately 1/3 open, spread and align the canopy over the top of the frame and Velcro attach to the 4 corners.

 Reference Connection Method(s) 1, 2 and 3 for more details.

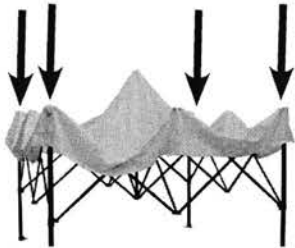

Step 4.

  Lift the 4 side header flaps of the canopy and Velcro attach the middle points to the scissor frame. Once these are done, replace the canopy header flaps.

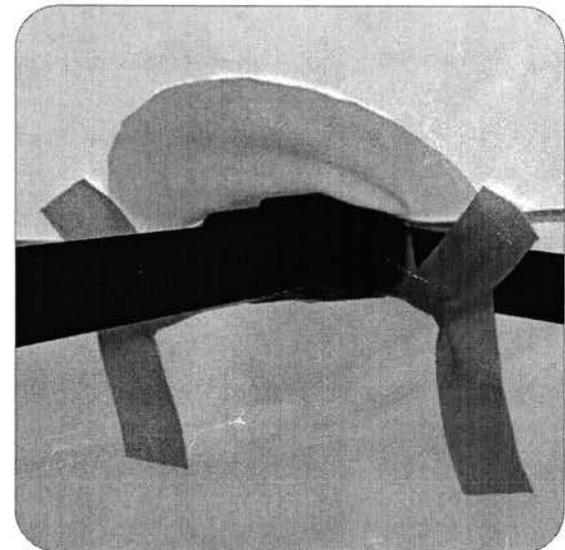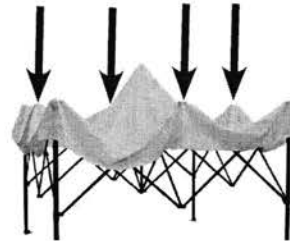


Kit Assembly

Step by Step

Step 5.

Expand the frame and lock in the 4 upper sliding hubs at each corner. You can unlock the sliding hub by pressing and holding the red lever to disengage the internal prong.


 
Refer to Connection Method 1 for more details.

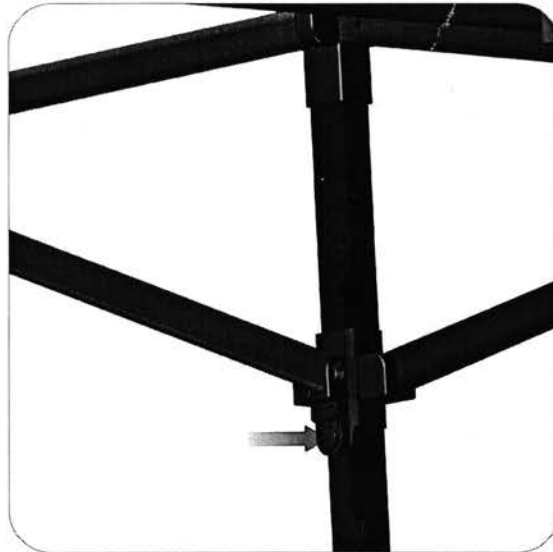

Step 6.

Expand the legs to one side of the tent until the sliding hubs snap lock into the first hole. Then lift the opposite side to level out. You can unlock the sliding hub by pressing and holding the red lever to disengage the internal prong.

  Refer to Connection Method 2 for more details.

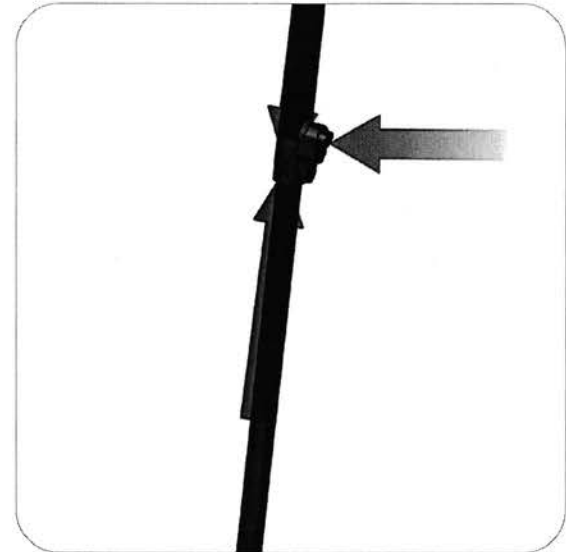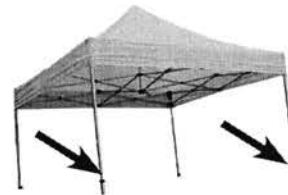

Step 7.

With the frame leveled at the first hole of each leg, continue to move the sliding hubs up to the 3rd hole. You can unlock the sliding hub by pressing and holding the red lever to disengage the internal prong.

 
Refer to Connection Method 2 for more details.



Step 8.

The frame will have one canopy crank system tensioner at the center of the underside. Carefully turn the lever clockwise to create tension on the canopy. This will raise the canopy and eliminate wrinkles.

Refer to Connection Method(s) 3 for more details.

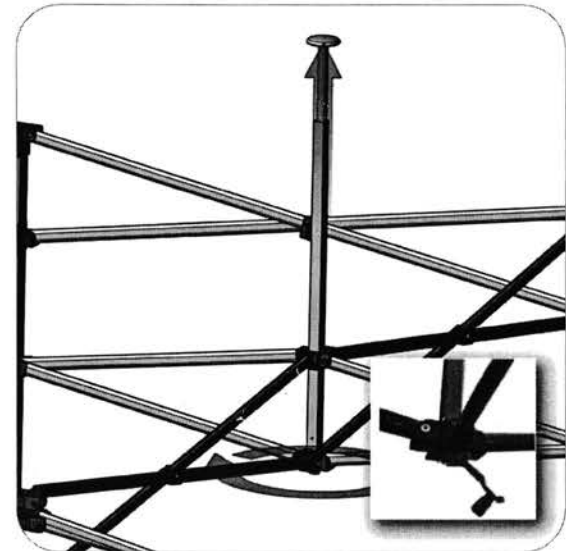


Connection Methods

Connection Method 1: Engage/Disengage Slide Lock




The frame will have four slide locks, one for each corner. When the tent scissor frame is fully extended; make sure the prong of the slide lock snaps into the tube locator hole. Press the lever on the slide lock to disengage the prong from the tube allowing to slide the lock up or down during assembly.

 Connection Method 2: Extend Tent Poles

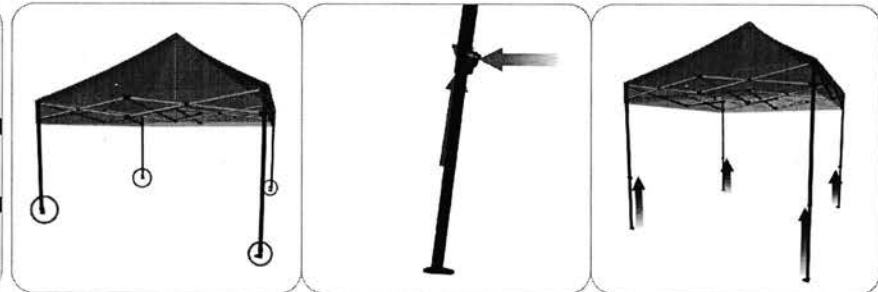

The frame will have four slide locks, one for each corner. When the tent scissor frame is fully extended; make sure the prong of the slide lock snaps into the tube locator hole. Press the lever on the slide lock to disengage the prong from the tube allowing to slide the lock up or down during assembly.

 Connection Method 3: Raise Canopy

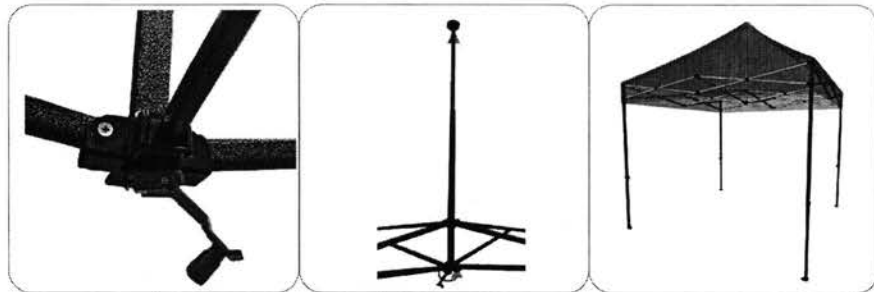

The frame will have one canopy crank system tensioner at the center of the underside. Once canopy is attached, the spring loaded tension bar will raise the canopy and eliminate wrinkles.